

Care instructions For EPICS

Opening:

Epics is designed to be opened from the end that is not permanently attached. **DO NOT** attempt to open the sign from the sides. Opening is to be done by hands only (i.e. Do not use objects such as Keys, screwdrivers, ID Cards... to open signs).

Washing:

Use a moist cloth for light cleaning. For tougher cleaning jobs, make a mild solution with a dish soap and water.

Do not use abrasive cleaners or cleaners containing Ammonia (standard window cleaners).

Inserts: Installing the insert into the sign frame

*Open lens from appropriate opening for the configuration you have.

*Lift lens to allow room for the insert to fit into frame.

*Gently install insert until it seats in frame.

*Finally, close the lens, making sure magnet engages.

Only use paper Insert less than or equal to .009” (9 mills) thick, 80lb weight.